PARTS LIST

for

Whirlpool CORPORATION

MID-SIZE MICROWAVE OVEN

MODEL

MODEL NO.	E.C.N.
MW3601XW	1

ALWAYS INCLUDE MODEL NUMBER AND E.C.N. NUMBER WHEN MAKING REFERENCE TO THIS PRODUCT

FSP®

FOR CUSTOMER SATISFACTION ALWAYS USE FACTORY SPECIFICATION PARTS

FSP®

Whirlpool CORPORATION
Benton Harbor, Michigan.

© 1992 WHIRLPOOL CORPORATION

4-92 Litho in U.S.A.

Part No. 4358091

4/92

CABINET PARTS

For Model: MW3601XW-1

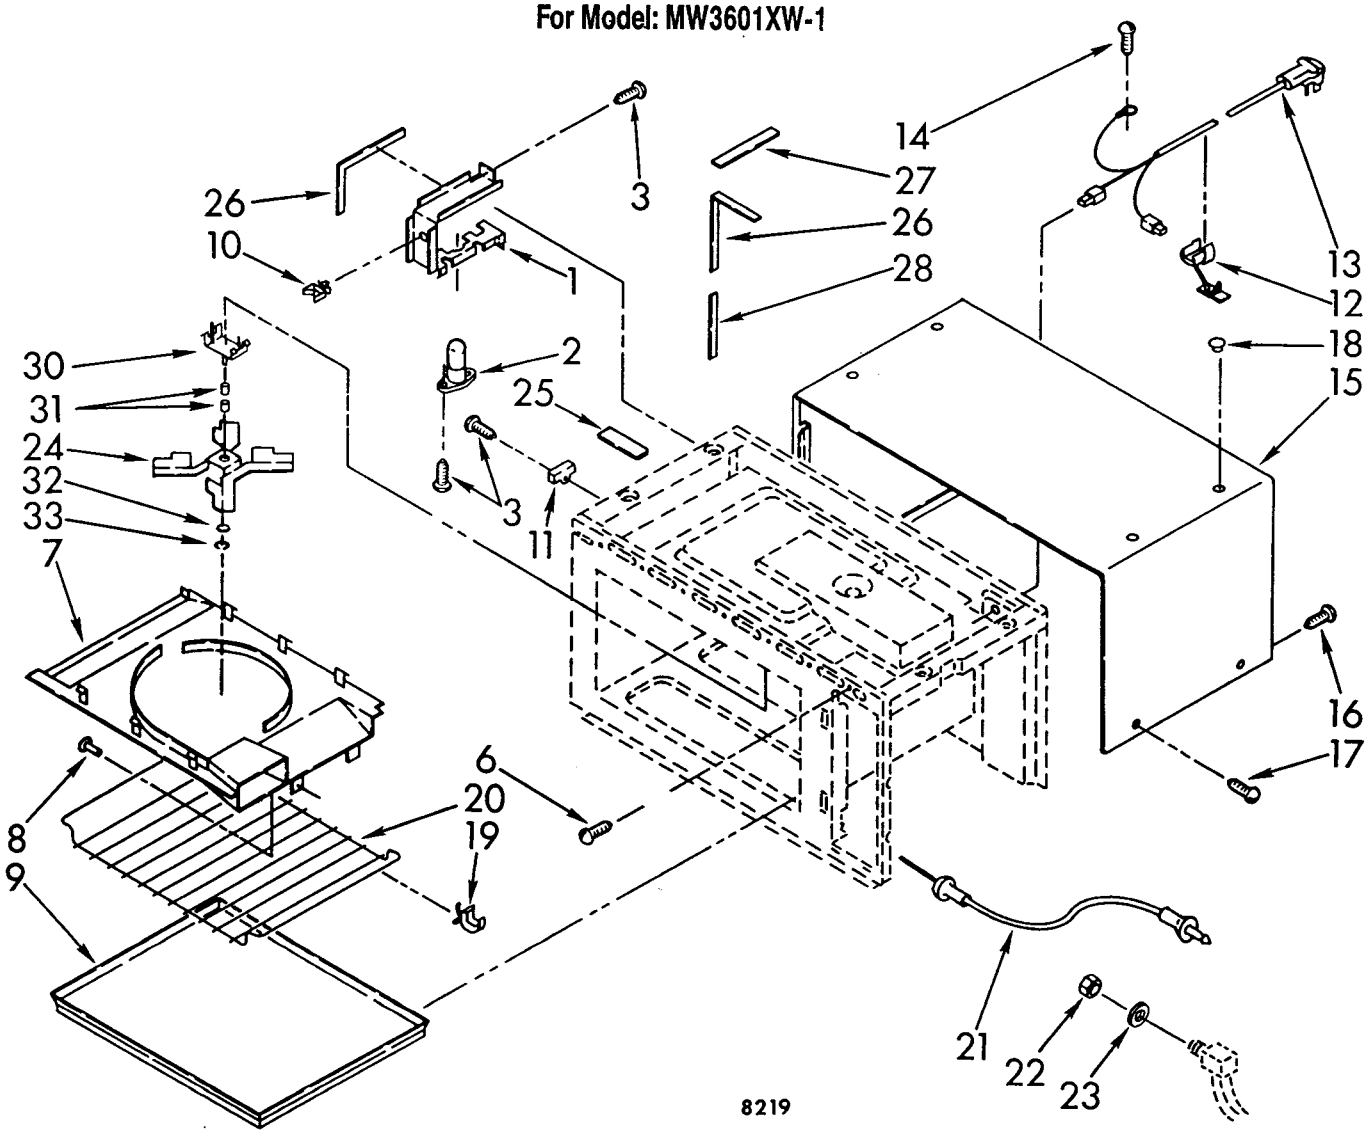

1	4158138	Bracket, Light
2	4158586	Baseless Light
3	4158079	Screw, 4 x 8 mm
6	4158336	Screw, 4 x 10 mm
7	4358077	Cover, Stirrer
8	4339374	Rivet (3)
9	4158596	Tray, Glass
10	4158267	Clip, Wire
11	4158562	Fuse, Thermal
12	4158092	Strain Relief
13	4158671	Cord, Power
14	4158079	Screw, 4 x 16 mm
15	4158329	Wrapper, Cabinet
16	4158071	Screw, 4 x 8 (7)
17	4158337	Screw
18	4158335	Plug, Hole (4)
19	4339330	Support, Rack (4)
20	4158137	Rack
21	4158371	Probe, Temperture
22	4158212	Nut (2)
23	4158213	Washer
24	4158587	Blade, Stirrer
25	4158171	Foam
26	4358028	Foam, Cabinet
27	4158173	Foam, Cabinet
28	4158174	Foam, Cabinet
30	4158263	Shaft, Blade
31	4158360	Bushing (2)
32	4158252	Washer
33	4158588	E-Ring

MAGNETRON AND AIR FLOW PARTS

For Model: MW3601XW-1

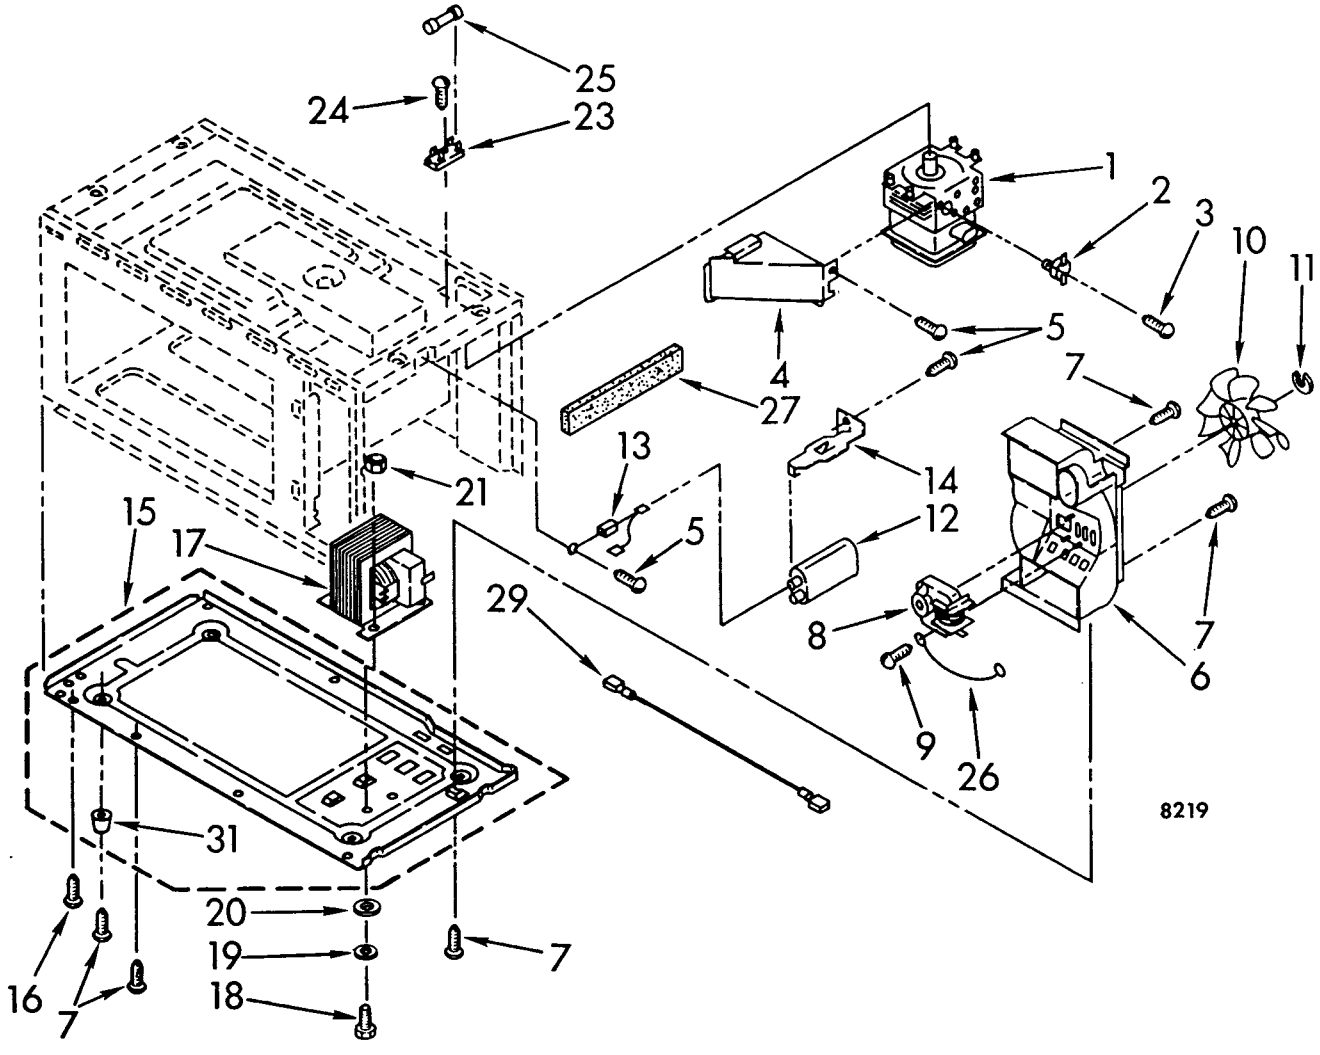

1	4158589	Magnetron
2	4158397	Thermal Protector
3	4158082	Screw,
4	4158610	Duct, Air
5	4158071	Screw, 4 x 8 mm
6	4158147	Cover, Fan
7	4158190	Screw, 4 x 12 mm
8	4158148	Motor, Fan
9	4158189	Screw, 4 x 28 mm (3)
10	4158149	Fan
11	4158063	E-Ring
12	4158593	Capacitor
13	4158595	Diode Cable
14	4358078	Bracket, Capacitor
15	4358079	Plate, Base (Includes Illus. No. 31)
16	4158194	Screw, 4 x 10 mm
17	4158592	Transformer
18	4158192	Screw,
19	4158087	Washer (2)
20	4158207	Washer (2)
21	4158053	Nut (2)
23	4158581	Holder, Fuse
24	4158079	Screw, 4 x 8 mm
25	4158378	Fuse
26	4158205	Lead, High Voltage
27	4158167	Foam, Fan Cover
29	4158184	Lead, High Voltage
31	4339375	Foot (4)

OVEN DOOR AND LATCH PARTS

For Model: MW3601XW-1

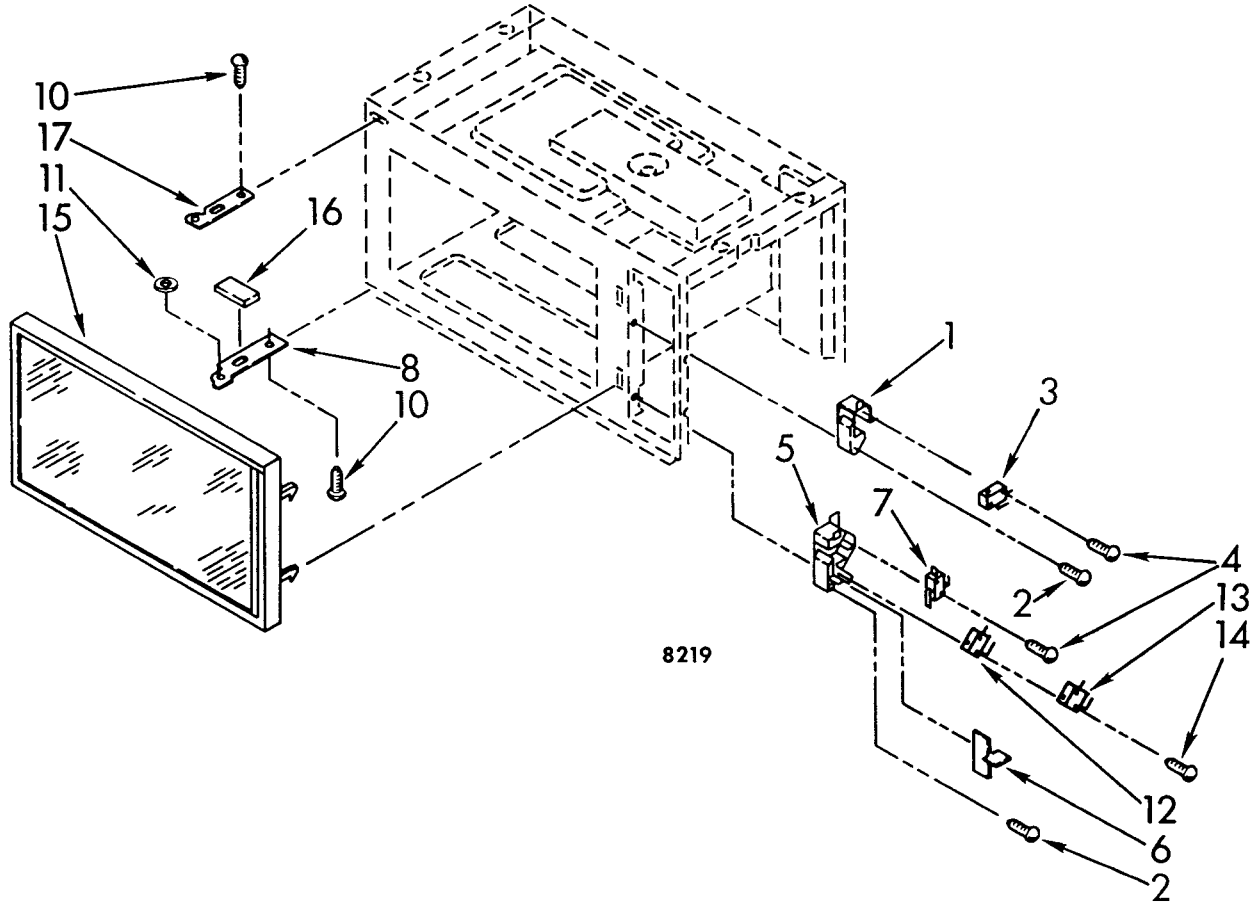

1	4158152	Latch, Upper
2	4158307	Screw, 4 x 12 mm
3	4158940	Switch, Primary
4	4158187	Screw, 3 x 16 mm (2)
5	4158839	Latch, Lower
6	4158155	Rod, Release
7	4158624	Switch, Monitor
8	4158160	Hinge Plate, Lower
10	4158747	Screw, 5 x 10 mm (2)
11	4158117	Washer
12	4158841	Switch, Secondary
13	4158948	Switch, Light
14	4158208	Screw, 3 x 30 mm
15	4158198	Door, Complete
16	4358080	Foam
17	4158139	Hinge Plate, Upper

CONTROL PANEL PARTS

For Model: MW3601XW-1

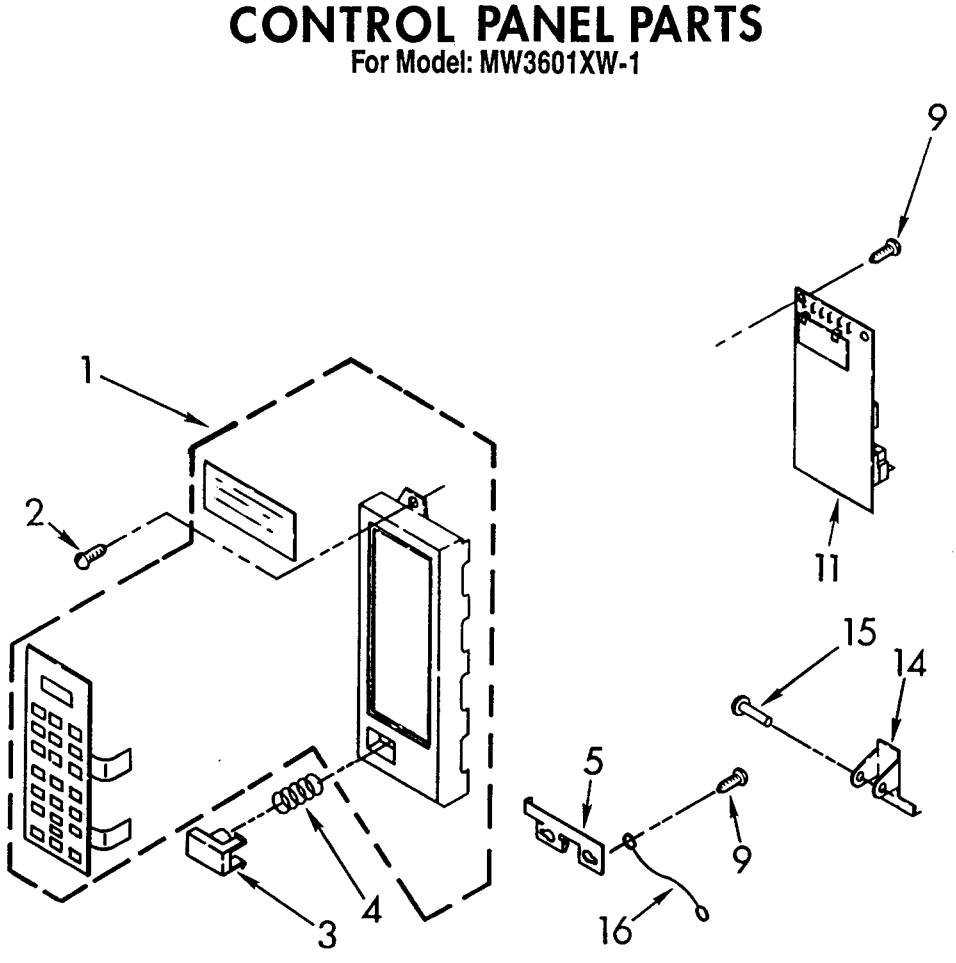

1	4158669	Control Panel Complete
2	4158188	Screw, 4 x 10 mm
3	4158334	Button, Push To Start
4	4158178	Spring, Button
5	4158603	Base Bracket
9	4158076	Screw
11	4358081	Microcomputor
14	4158203	Lever, Release
15	4158204	Pin, Lever
16	4158205	Wire Lead

WIRING HARNESS PARTS

For Model: MW3601XW-1

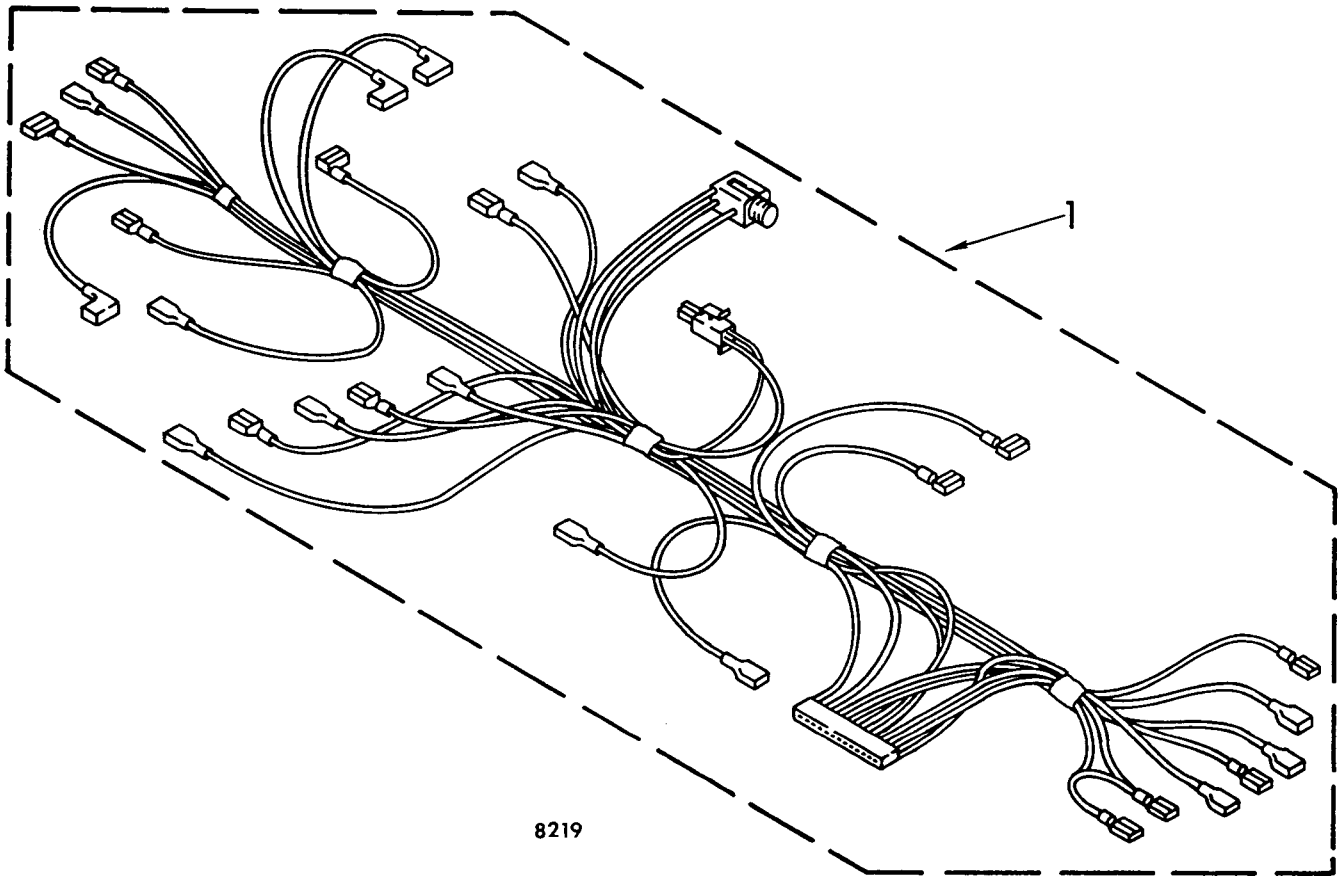

1	4358082	Harness, Wiring (Main)

LITERATURE PARTS

LIT4158533	Tech Sheet
LIT4158527	Buy Guide Label
LIT4158034	Cookbook
LIT4158027	Label, Autoset
LIT4158517	Guide, Use & Care
LIT4158573	U.T.C. Card
LIT4358091	List, Repair Parts

OPTIONAL PARTS NOT INCLUDED

PAINT,TOUCH UP (1/2 oz.)

261869	Citrine White (1/2 Oz.)
832899	Cord Brown (1/2 Oz.)

PAINT, SPRAY

261900	Citrine White (6 Oz.)
830881	Cord Brown (13 Oz.)

ADHESIVE

591014	Adhesive, Loctite (1/3 Oz.)

SEALER

482338	Sealer, Silastic (3 Oz.)

ACCESSORIES

4158000	Under The cabinet Mounting Kit
4158015	Wall Mount Kit
4158017	Built-In Kit
4158019	Bi-Level Rack Kit